

INVOLIGHT

LED Tero-Scanner,HP



RX300HP

USER MANUAL

TPL-069 LED Treo-Scanner Manual

Our LED Treo-scanner light offers many wonderful effects which are very magic. It is designed for professional places, such as stages, disco, night clubs etc. please read the manual before operation.

A. SPECIFICATION

1. Weight: 4.5kgs
2. Size:410*410*210mm
3. Power input:AC 120/240V,60/50HZ
4. Wattage:45W
5. LEDES:12*3W RGBW(R:3,G:3,B:3,W:3)
6. Built-in program,Auto running,Sound active, DMX mode,M/S.
7. Two sound active modes optional
8. LED display for easier operation
9. LEDs running speed, motors running speed and motors retention time adjustable
10. Very sharp and beautiful laser beams effects
11. Inner box: 46.5*46.5*36.5cm
12. Master carton: 48.5*48.5*56cm
13. 2 pcs/ctn

B. OPERATION:

1.Built-in programs

- 1、 Press MODE button ,enter the built-in program menu“Pr.××”。
- 2、 Press UP or DOWN button ,select the effect program Pr.01~Pr.15。
- 3、 Press SETUP button ,enter setup speed program menu “SP××”。
- 4、 Press UP or DOWN button ,setup speed value SP01~SP100 (FL)。
- 5、 Press SETUP button ,enter setup flash memu“FS××”。
- 6、 Press UP or DOWN button ,setup flash value FS00~99。

2.Auto run mode

- 1、 Press Mode button ,enter auto run mode“AUTO”。
- 2、 Press SETUP button ,enter setup auto run mode program “n.×××”。
- 3、 Press UP or DOWN button ,enter setup auto run mode value n.001~n.100。
- 4、 Press SETUP button ,enter setup auto run mode speed menu“SP××”。

- 5、 Press UP or DOWN button ,setup speed value SP01~SP100 (FL)。
- 6、 Press SETUP button ,enter setup auto run mode flash menu “FS××”。
- 7、 Press UP or DOWN button ,setup flash value FS00~99。

3.DMX mode

- 1、 Press MODE button ,enter DMX control running mode menu “d.×××”。
- 2、 Press UP or DOWN button ,setup DMX address value d.001—d.512。
- 3、 Press SETUP button ,enter setup DMX mode d.-××
- 4、 Press UP or DOWN button ,setup DMX mode d.-P1~d.-P2.

4.DMX value as follows:

DMX mode 1 : d.-P1

CH1			CH2	CH3	CH4
NO.	DMX value	LEDs Programs	LEDs running speed	LEDs flash frequency	Motor running speed
1	0	OFF	NO USE	NO USE	SPEED 0--255
2	1--10	PROGRAM01	SPEED 0--255	FLASH 0--255	
3	11--21	PROGRAM02			
4	22--32	PROGRAM03			
5	33--43	PROGRAM04			
6	44--54	PROGRAM05			
7	55--65	PROGRAM06			
8	66--76	PROGRAM07			
9	77--87	PROGRAM08			
10	88--98	PROGRAM09			
11	99--109	PROGRAM10			
12	110--120	PROGRAM11			
13	121--131	PROGRAM12			
14	132--142	PROGRAM13			
15	143--153	PROGRAM14			
16	154--164	PROGRAM15			
25	165--255	Sound Mode			Sensitivity 0--255

DMX MODE 2 : d.-P2

CH1			CH2	CH3
NO.	DMX Value	LEDs Programs	LED Flash frequency	Motor running speed
1	0	OFF	NO USE	SPEED 0--255
2	1--10	R	FLASH 0--255	
3	11--21	G		
4	22--32	B		
5	33--43	W		
6	44--54	RG		
7	55--65	RB		
8	66--76	RW		
9	77--87	GB		
10	88--98	GW		
11	99--109	BW		
12	110--120	RGB		
13	121--131	RGW		
14	132--142	RBW		
15	143--153	GBW		
16	154--164	RGBW		
17	165--255	Sound Mode	Sensitivity 0--255	

1.Master /Slave mode

Press **MODE** button ,enter slave mode “**SLAV**”。

When the Master on the built-in program .Auto run mode or sound active mode ,all the effects and mode is the same with the slave one .

2.Sound active mode

- 1、 Press **MODE** button ,enter the sound active mode“**SOUN**”。
- 2、 Press **SETUP** button ,enter setup sound active mode and the sound active sensitive menu “**S×,××**”。
- 3、 Press **UP** or **DOWN** button more than 3 seconds then release ,setup sound active mode **S1.××** or **S2.××**。
- 4、 Press **UP** or **DOWN** button ,setup sound active mode value **S1.00~S1.31**or **S2.00~S2.31**。

INVOLIGHT